


# Smart Home Cybersecurity Guide



## Change Default PINs

Your smart TV or device probably came with 0000 as the PIN.

Change it - attackers know the defaults.

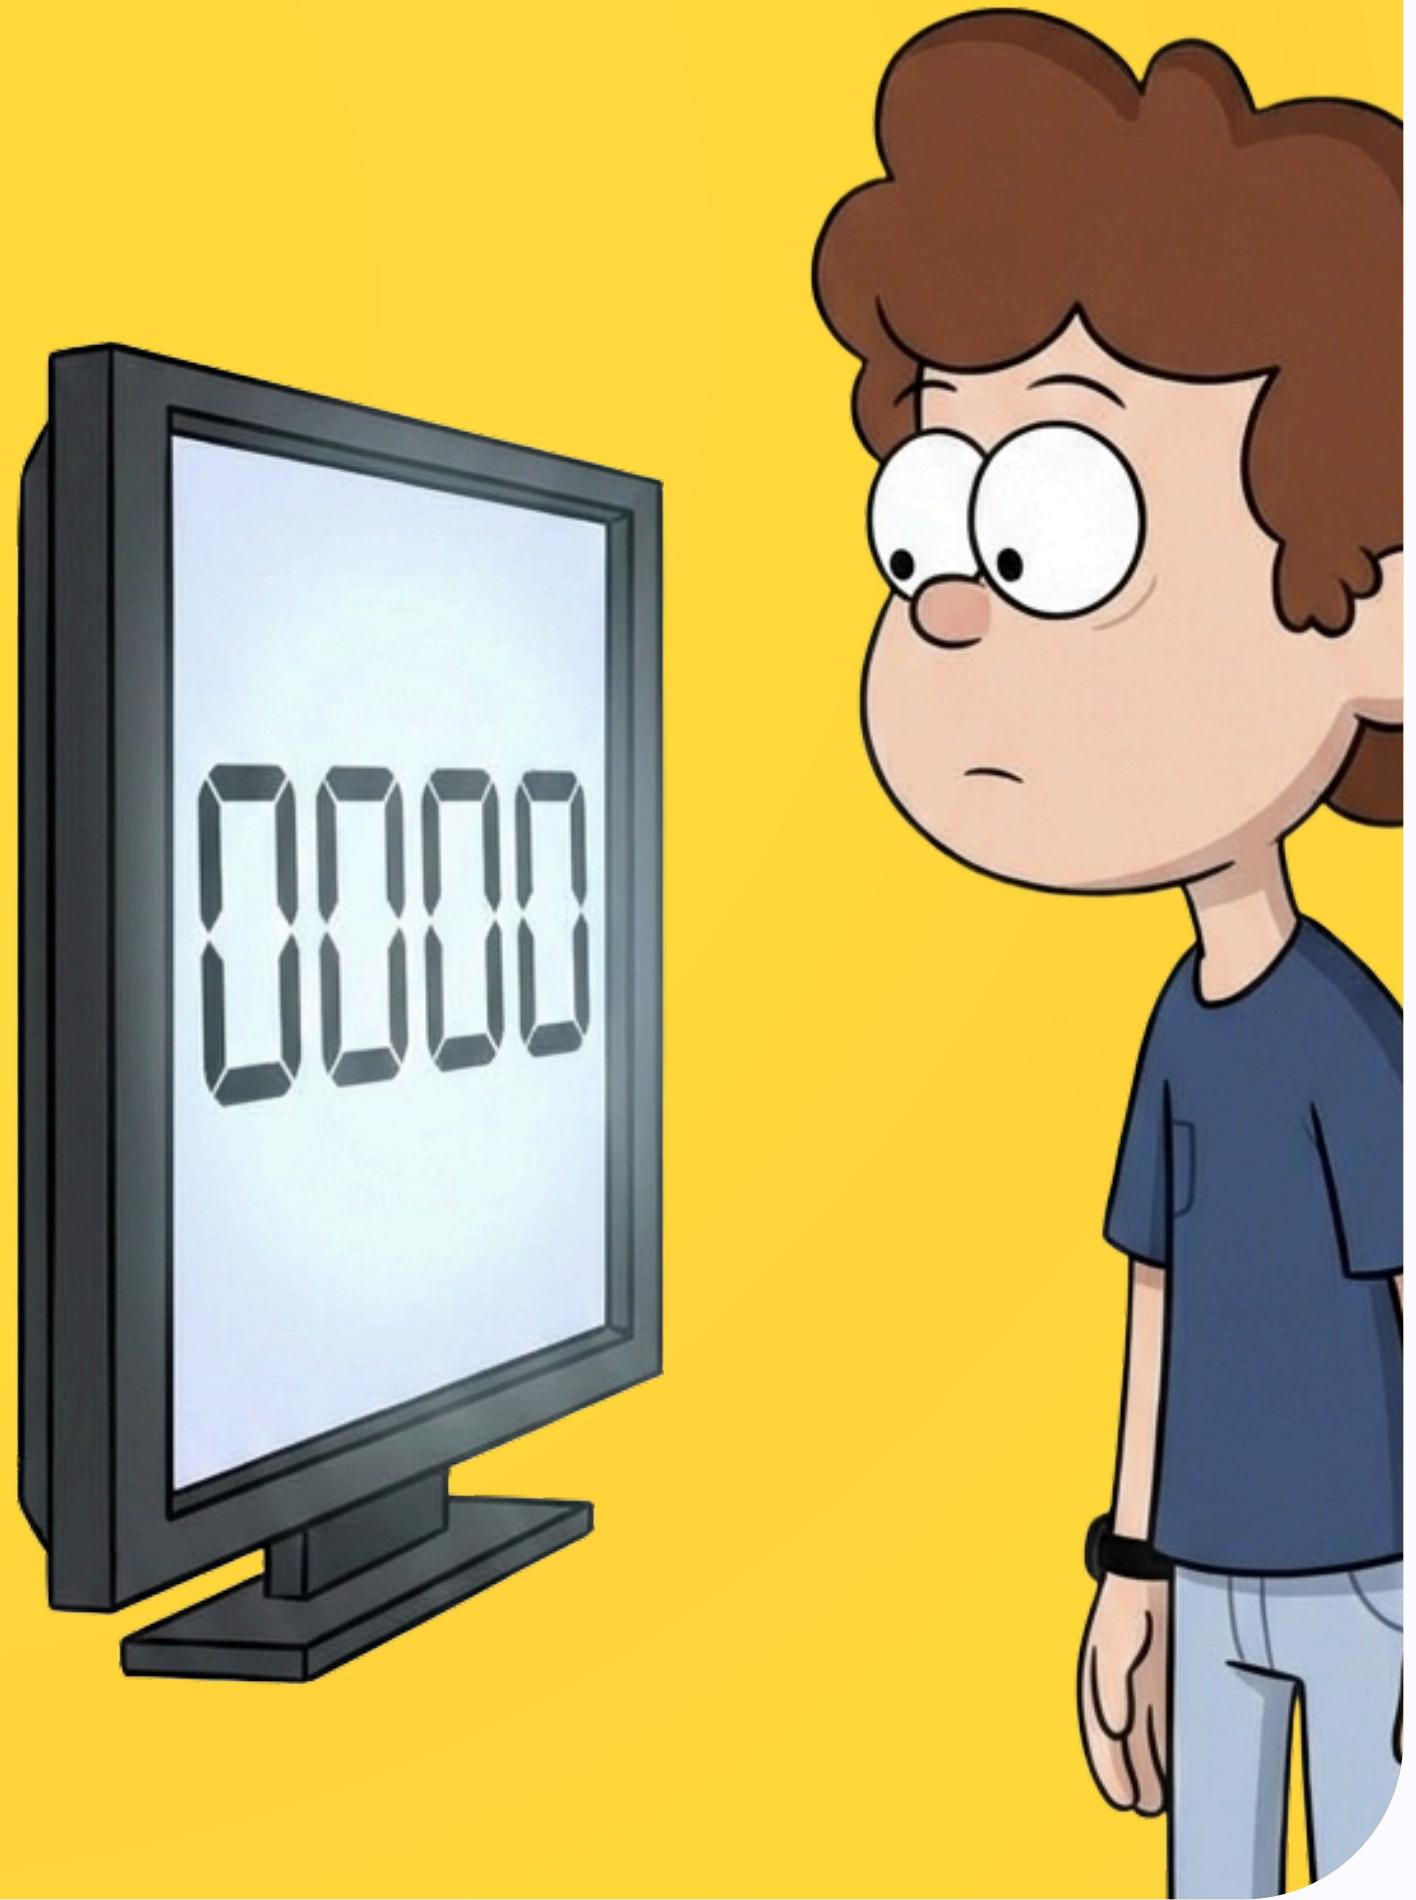



## **Use a Separate WIFI for Smart Devices**

Create a guest network just for smart home gear. If one device gets hacked, it won't reach your laptop or phone.

3

## Update and Limit What You Use

- Turn on auto-updates
- Disable unused streaming services
- If you don't use WiFi on your smart TV, turn it off



## Use Strong, Unique Passwords

- Don't reuse the same password across devices.
- Make each one complex and unique or use a password manager.

5

## Enable Two-Factor Authentication

When possible, turn on 2FA. It adds a layer of protection if someone tries to log in to your account.





## Keep Cameras Out of Private Spaces

Avoid placing smart cameras in bedrooms or anywhere you'd feel exposed. If hacked, they can be used to spy.

# Security Awareness, Simply Explained

Smart homes need smart habits.  
Share this guide with friends or  
family to help them stay safe too.



[wizer-training.com](http://wizer-training.com)